

**DIGITAL PERSONAL-SCALE WITH COMPARISON
WEIGHT/ DIGITALE PERSONENWAAGE MIT
FUNKTION ZUM GEWICHTSVERGLEICH/ PÈSE-
PERSONNE DIGITAL AVEC COMPARAISON DE
POIDS/ DIGITALE PERSOONLIJKE SCHAAL MET
VERGELIJKING GEWICHT**



**Instructions manual/ Bedienungsanleitung/ Mode d'emploi/
Gebruiksaanwijzing**

Before using the device, please read these instructions carefully and retain them for the future reference./ Lesen Sie die Bedienungsanleitung vor dem ersten Gebrauch. Bewahren Sie SIE sorgfältig zum Nachlesen auf!/ Veuillez lire la notice avant d'utiliser le produit et la conserver pour référence ultérieure./ Lees deze gebruiksaanwijzing alstublieft voor het eerste gebruik, bewaar deze gebruiksaanwijzing op een veilige plek voor toekomstige referentie!

CHARACTERISTICS

- | | |
|---|---------------------------------------|
| ☒ 3 selectable measurement units : kg / lb / st | ☒ Auto-power off function |
| ☒ Capacity: 180kg | ☒ Low Battery and overload indication |
| ☒ Power supply: 2 x 1.5V AAA batteries (Not supplied) | ☒ Minimal weight: 5Kg |
| ☒ Division: 0,1kg/ 0,2lb | ☒ Weight comparison function |

USE AND MAINTENANCE ADVICE

- ☒ This appliance is designed for household use only.
- ☒ Use it for its intended purpose as indicated on the instructions.
- ☒ Place the scale on firm, level ground. Do not place it on an uneven surface as this type of surface will not give reliable results.
- ☒ Be sure to position yourself in the center of the scale to avoid tipping over. Do not move during the weighing.
- ☒ NEVER step on the scale with wet feet as the weighing platform can be very slippery if it is wet. Make sure the tray and your feet are dry before using it.
- ☒ Please take off your shoes before weighing yourself to avoid damaging the glass platform. Never step on it with socks on.
- ☒ Do not jump or stomp your foot on the scale.
- ☒ Do not expose your device to direct sunlight. Keep it away from any source of heat, humidity, or drastic changes in temperature.
- ☒ Handle the scale with care when moving to avoid dropping it. Avoid bumps and jolts.
- ☒ Do not use the device if it is not working properly, if it has been dropped on the ground or in water, or if it has been damaged.
- ☒ Do not attempt to disassemble the device. The device does not contain parts that can be serviced or replaced by the user.
- ☒ If the device is broken, do not repair the device yourself. All the repairs must be made by a qualified technician.
- ☒ Do not store your device in an upright position.
- ☒ Do not place any objects on the scale.

OPERATION**Weighing**

1. Place the scale on a stable, firm surface. All four feet of the scale must be in contact with the ground.
2. Place both feet on the scale platform.
3. Stay still while your weight is displayed. When your weight is determined, it flashes twice. **The backlight of LCD screen is in blue colour and the scale records this weight as person 1 (P1) on first time use.**

4. Step off the scale, it turns off about a few seconds later.

Selecting the unit of measurement (kg/lb/ st)

If you wish to change the unit of measurement, turn the scale over and select the unit of measurement: kg, lb or st by pressing the "UNIT" button.



Memory function

This scale has a built-in memory.

Next time when the user (P1) will stand on the scale, his weight will display as usual. When he will step off, if the weight is different from last weighs in, the scale will calculate the difference between the current weight and last weight. Thus, the weight difference will display with an UP or DOWN arrow to indicate weight gain (red color) or weight loss (green color). See the table and illustrations (examples) below.

Display colour	Result	Reading result
* Blue	Weighing result and no arrow	Stable weight (no change)
* Green	↓ with a decreasing weigh difference	Weight loss
* Red	↑ with an increasing weigh difference	Weight increase

Last weight	Current weight	Weight difference after stepping off the scale

8 user memory

The scale can store up to 8 persons from "P1" to "P8".


It can recognize a new user if the weight difference is 3kg or more than the weight of "P1" user or other users.

For example, if I weigh 60kg today, the scale would automatically save 60kg as the weight of "P1". If another user weighs himself and the result is 63 kg, it will automatically be stored as the weight of "P2" without impacting on the weight of P1.

However, if the weigh difference is in the measuring range of 2kg, the memorized weigh will belong to the first same user: "P1" or other users which difference weight related to their weighing result is within the range of 2kg.

Notes: The user profile beginning with "P" followed by a digit (ex: "P1") only displays a few seconds after the display of the weight difference.

MESSAGES

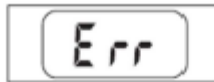

Means there is an overload, Please step off the scale to avoid any damage.



Low battery indicator. Replace with new batteries.

BATTERY WARNINGS

- ⊗ Please remove the batteries if you plan not to use the appliance for a long period.
- ⊗ Never mix alkaline, regular (carbon-zinc) and rechargeable (nickel hydride) batteries.
- ⊗ Never mix old and new batteries.
- ⊗ Never try to charge non-rechargeable batteries.
- ⊗ Remove rechargeable batteries from the appliance (if possible) before charging.
- ⊗ Rechargeable batteries should always be charged under the supervision of an adult.
- ⊗ Remove used batteries.
- ⊗ Never short-circuit the power terminals.
- ⊗ Always use batteries of the recommended type or equivalent type.
- ⊗ Observe the correct polarity when replacing the batteries.



CLEANING AND MAINTENANCE

Do not immerse in water or any other liquid.

- ⊗ Clean the scale with a soft, damp cloth, then wipe with a clean, dry cloth.
You can also clean the surface with a soft cloth dampened with window cleaner.
- ⊗ Do not use solvents or abrasive materials.
- ⊗ Water must not enter the device. Wait until the device is completely dry before using it again, or wipe it thoroughly with a clean, dry cloth.
- ⊗ Do not expose the device to direct sunlight, protect it from dirt and moisture.
- ⊗ Keep it away from extreme temperatures.

WARNING: You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled. This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.
Imported by EML – trading name Prodis, 1 rue de Rome 93110 Rosny-sous-Bois-France/ Made in PRC

Marketed by EUROTOPS VERSAND GMBH D-40764 LANGENFELD, Germany

